


Place bulkhead
@forward arrows
and tape in place


beam 52" or 54" @ 5.8ft station
12ft O&P version # 21 9-29-2006

Copyright
Red Barn Boats
10-05-2006


Place bulkhead
@ aft arrows
and tape in place

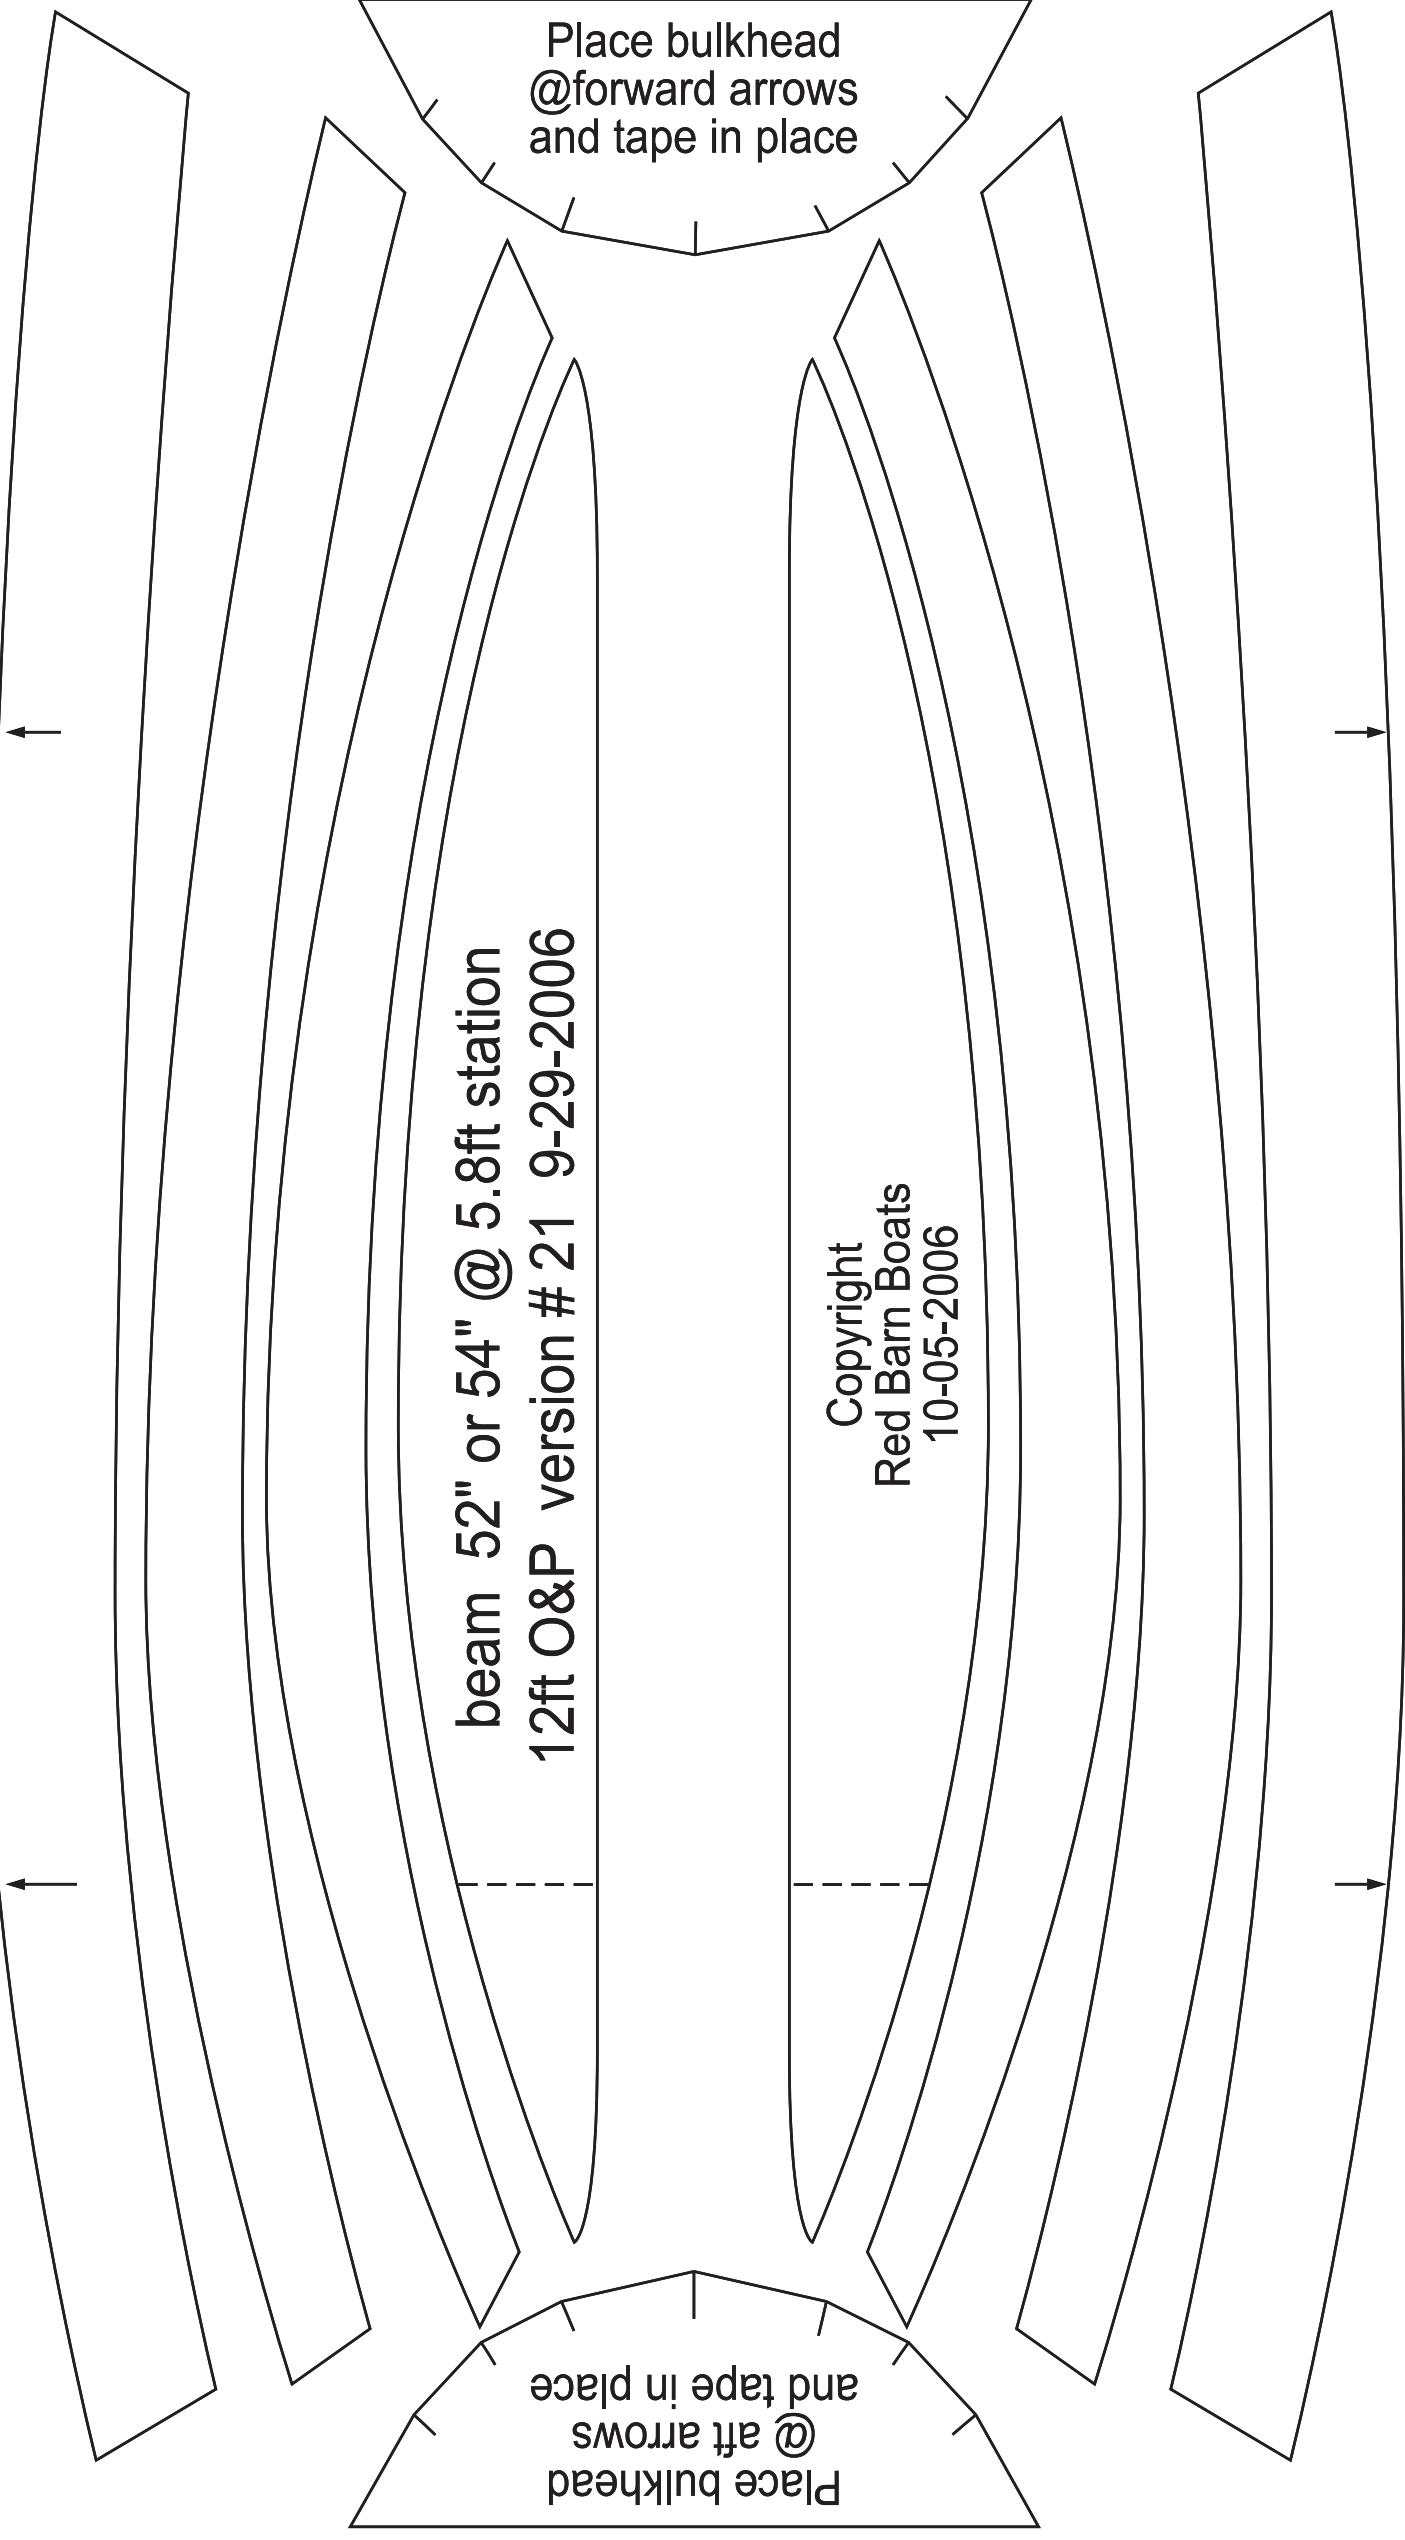

Print PDF file
 Paste to Cardboard
 Cut out along lines
 Tape back together
 Join two halves
 Tape ends at tops
 Tape panel ends
 Place and tape bulkheads

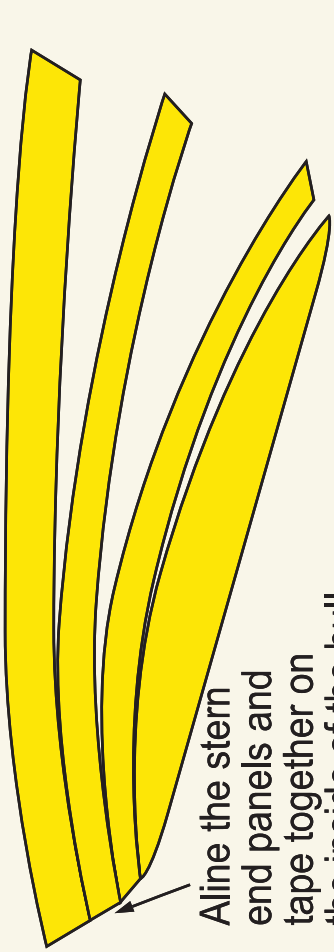


Align the stern end panels and tape together on the inside of the hull.

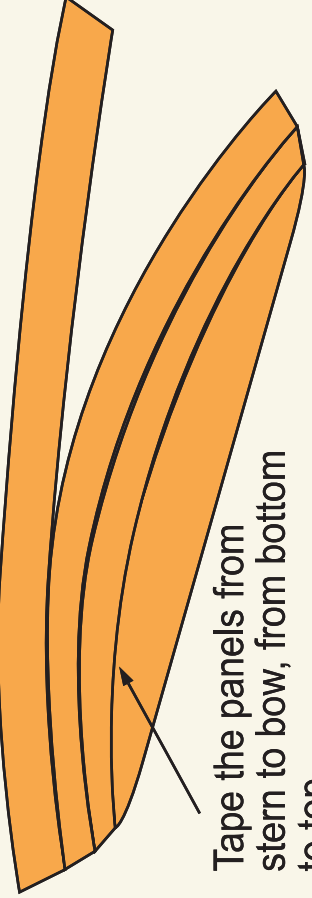


Tape the panels from stern to bow, from bottom to top.

All inside views this page.

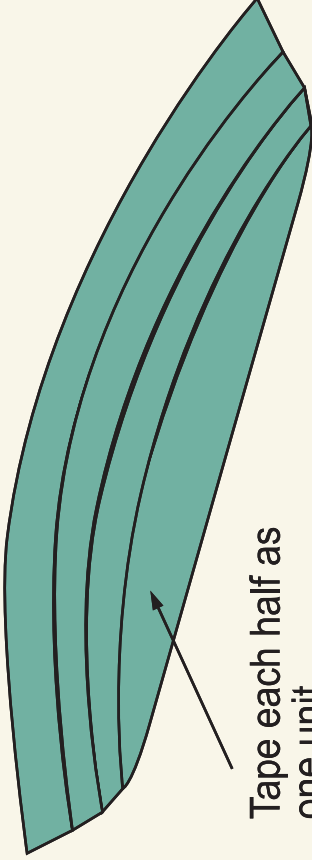


Tape each half as one unit.

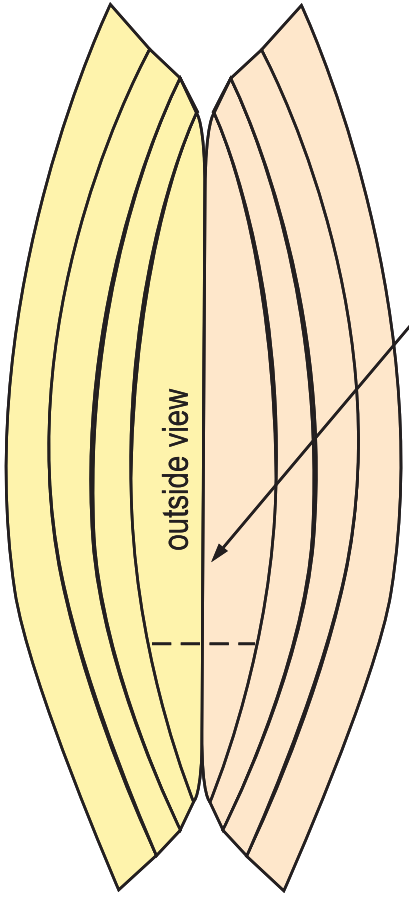

Align the two panel sets and tape along the keel seam on the inside.

Tape the ends from the outside, starting by matching the top panels and working each pair down to the keel.

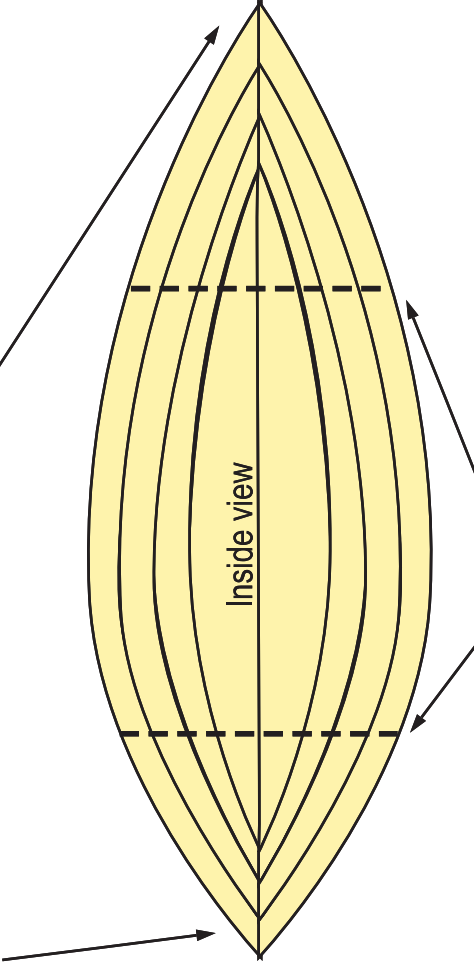

Place the bulkheads at the "Arrows" marked on the hull. The bulkheads are used to maintain hull shape to show the lines of the O&P Pod.