

Bottom, Stern, and Port side panels:



S

S= stern end of panels

S


I'm sorry to have changed the way that I present this latest set of PDF models, but I found that it has become necessary to toss them about to prevent reverse engineering.

12 Ft Padilla Bay Skiff 2-29-2008

S

S

Bulkhead and Starboard side panels:

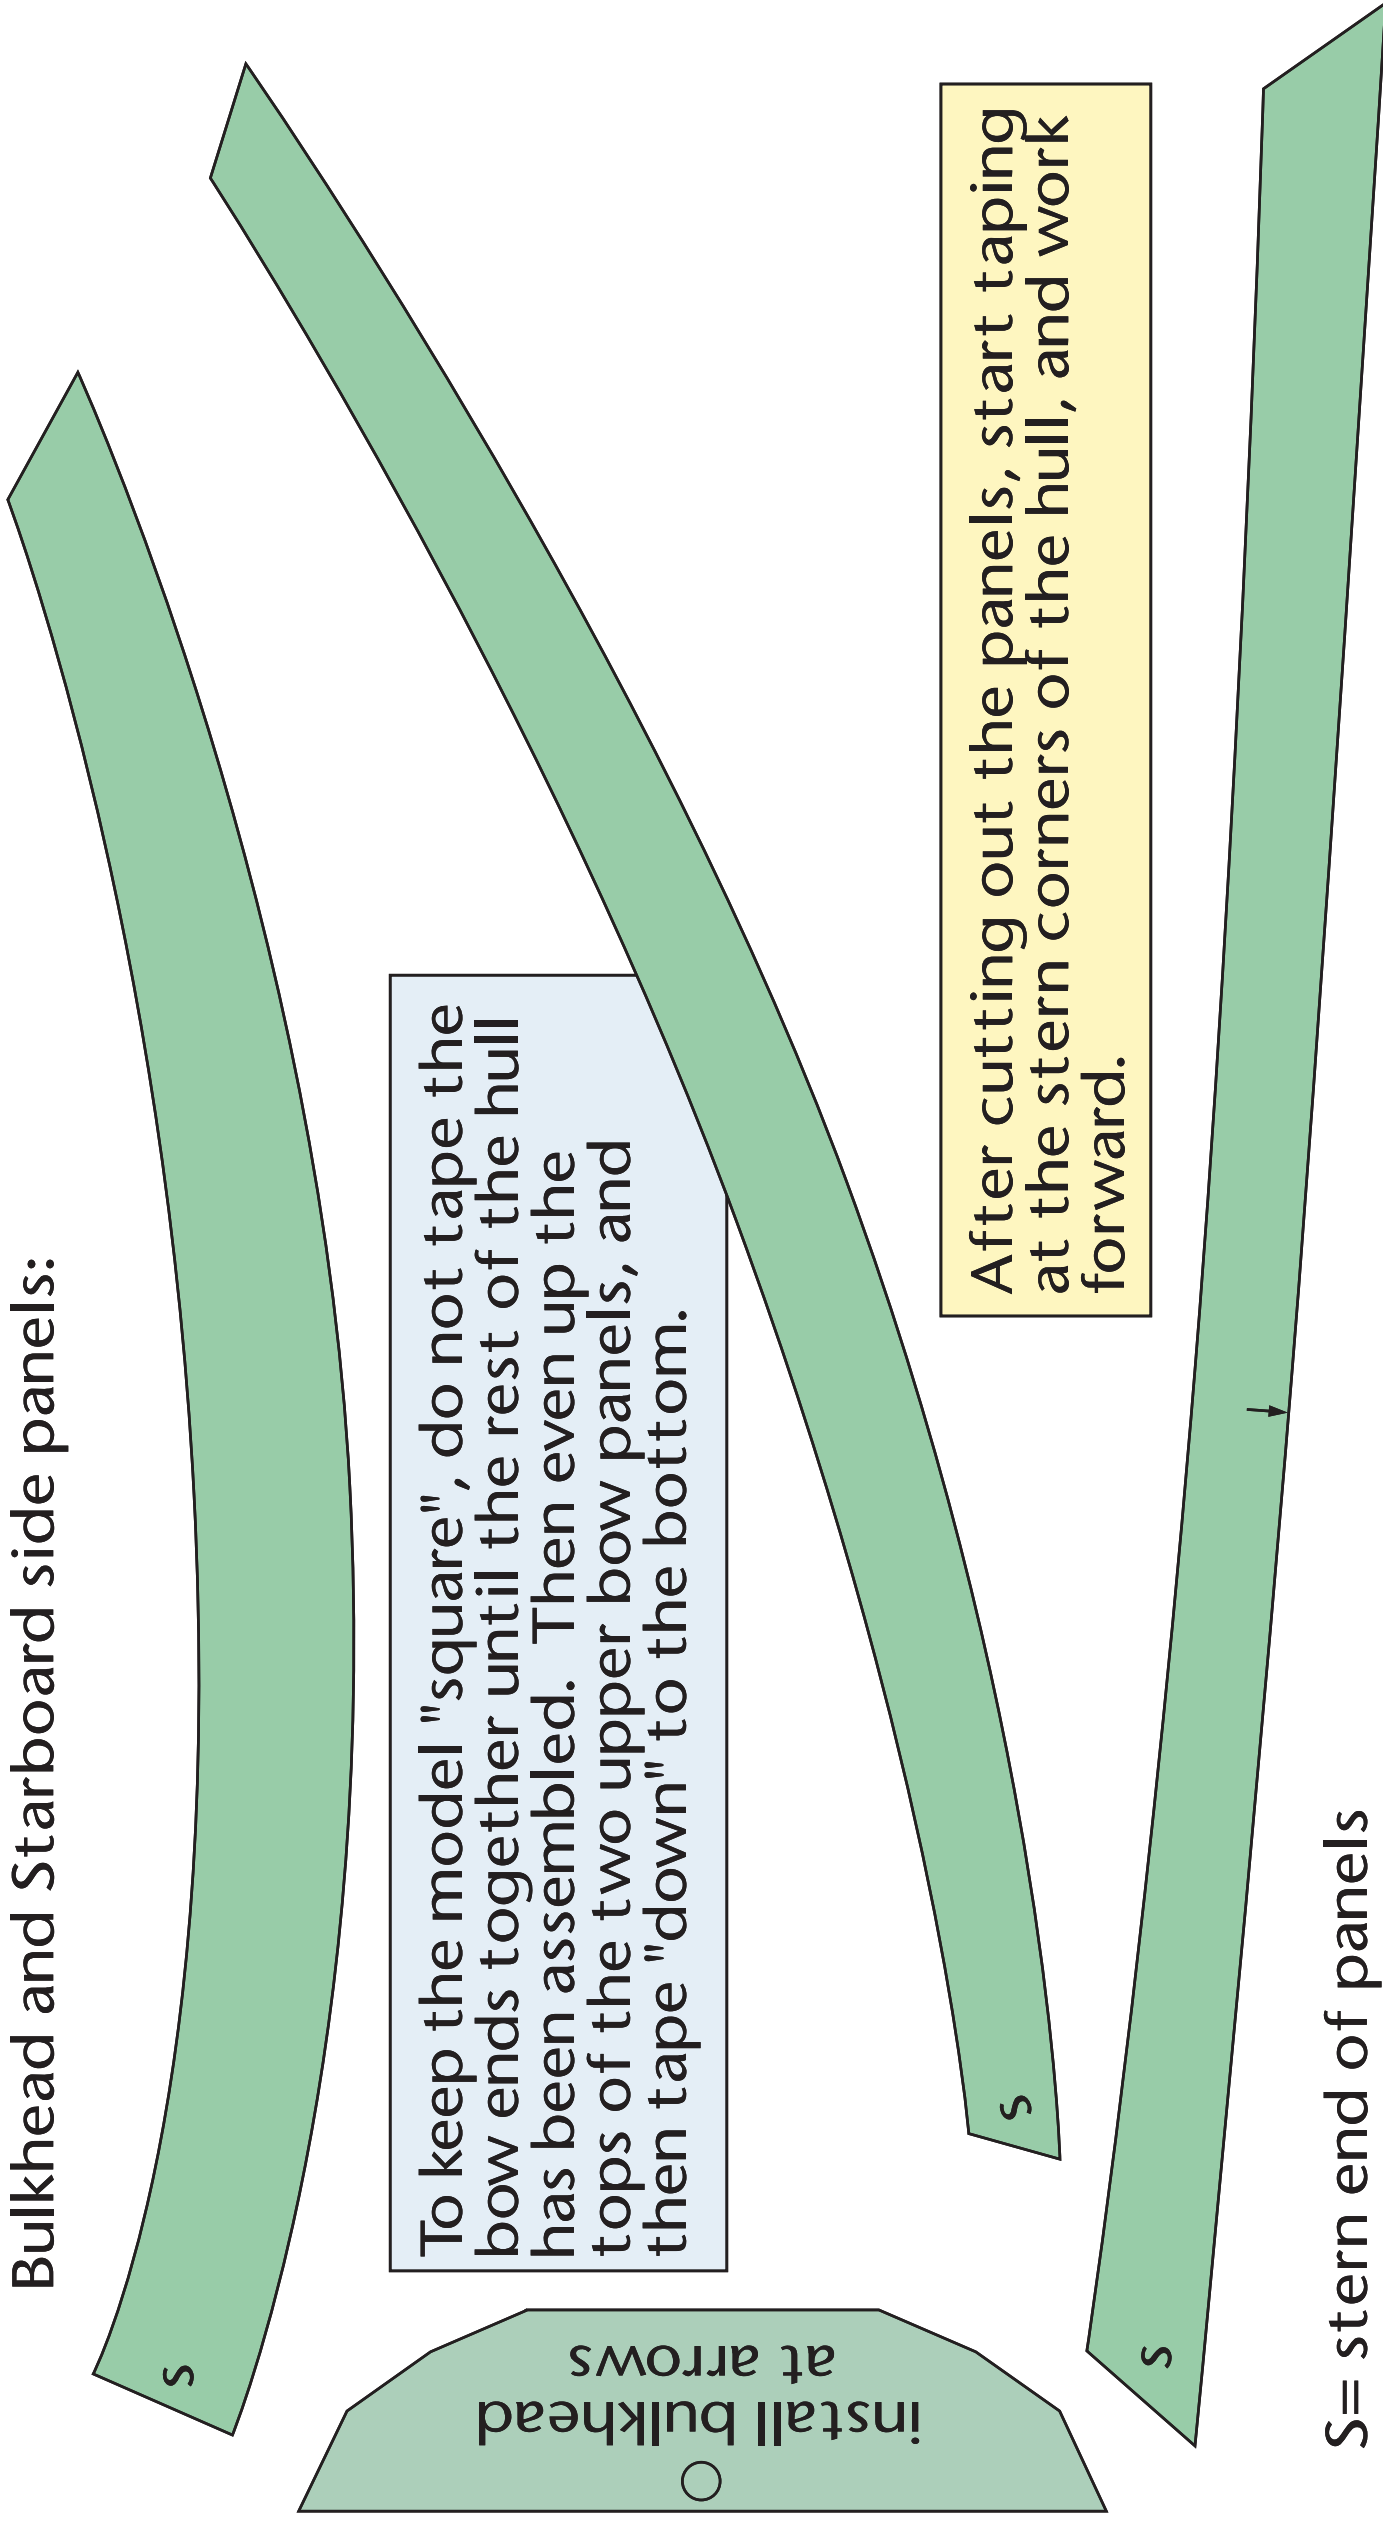

To keep the model "square", do not tape the bow ends together until the rest of the hull has been assembled. Then even up the tops of the two upper bow panels, and then tape "down" to the bottom.

After cutting out the panels, start taping at the stern corners of the hull, and work forward.

install bulkhead
at arrows

S= stern end of panels