



beam 52" or 54" @ 5.8
12ft O&P version # 21



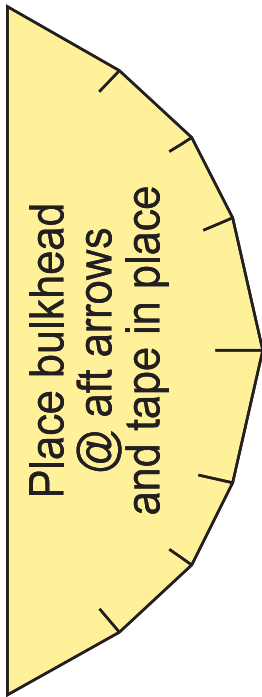


Use the registration marks to line up the two pages.
It may help to tape them to a window to see through
the two sheets. Be accurate to keep the curves matched
up. Cut out the four separate groups and glue to cardboard.
I use "Red Baron" pizza boxes and glue the panel groups to
the "shiny" outside surface to have the glue stick work.
You can get two model sets from the one box. Follow the
assembly instructions on the following pages.




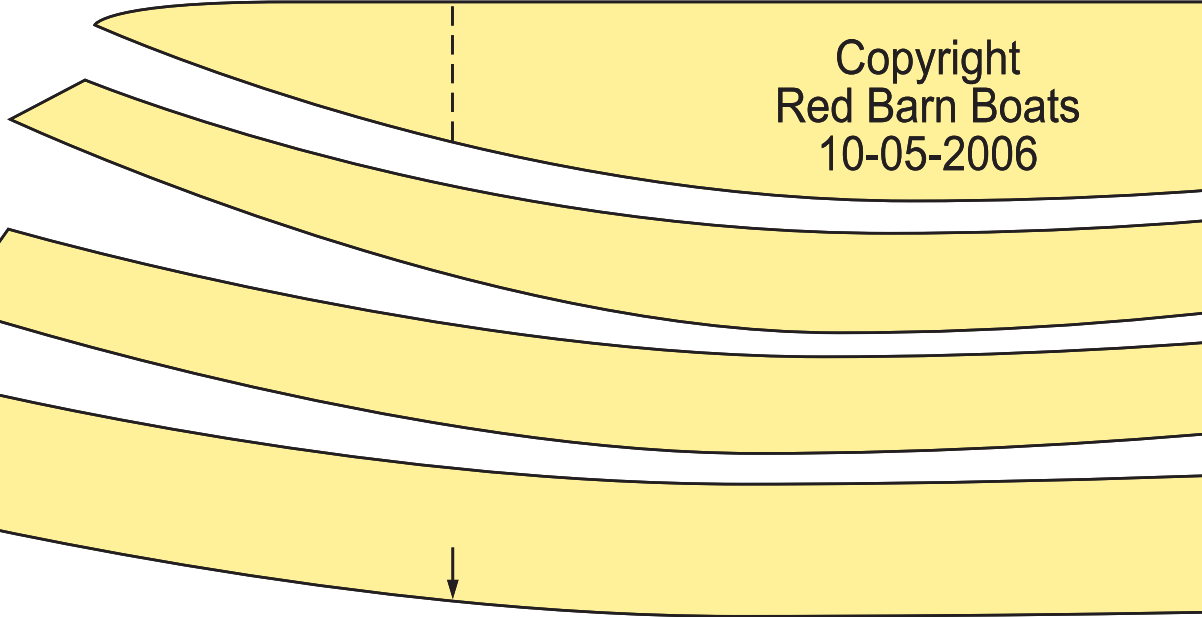



Copyright
Red Barn Boats
10-05-2006



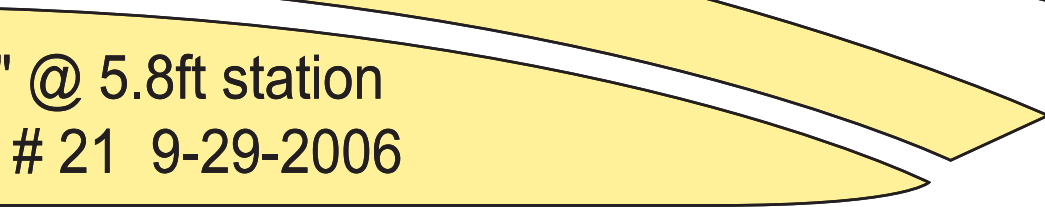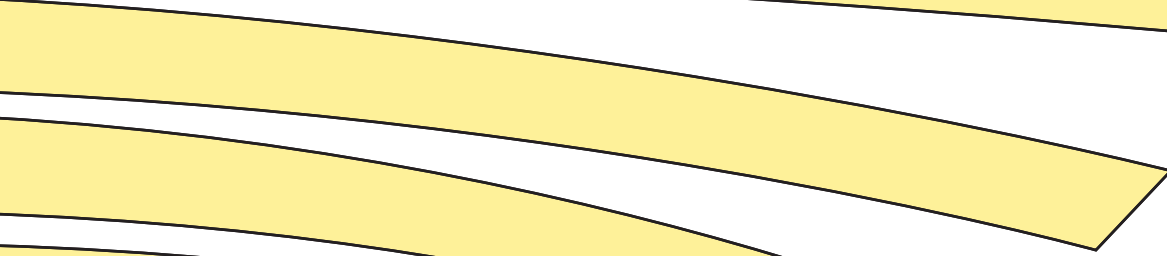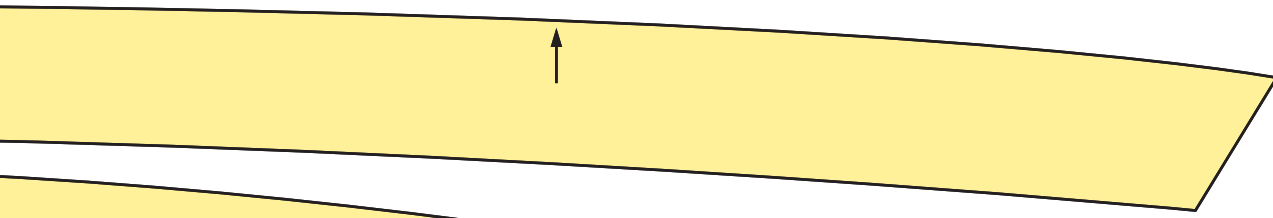


Be careful when you join the two hull halves together, or the bow and stern will twist off from the centerline.

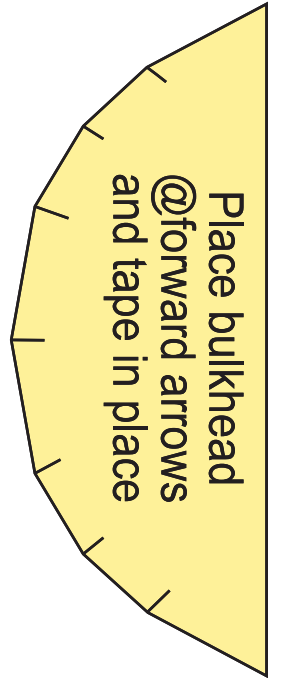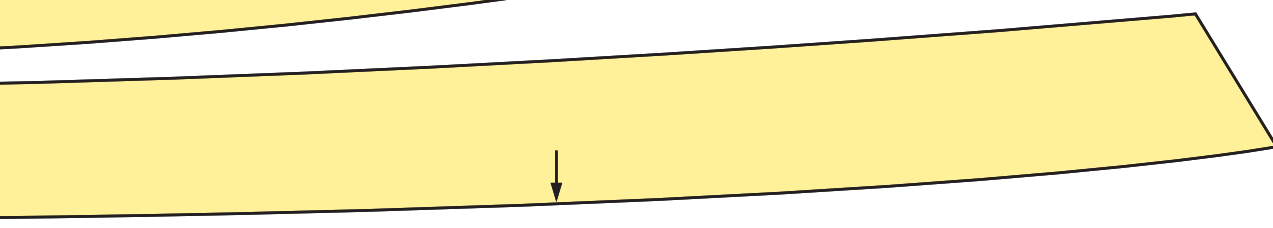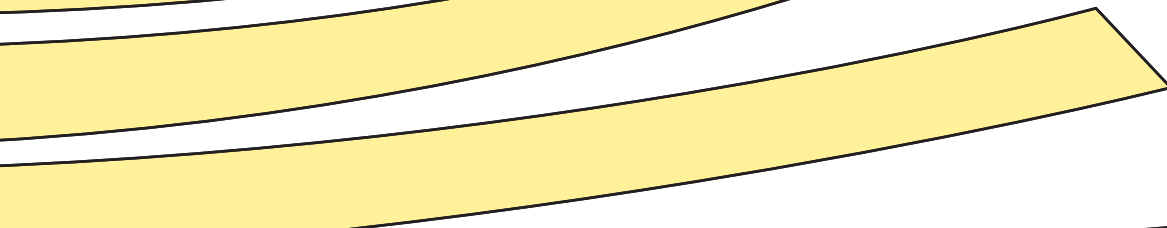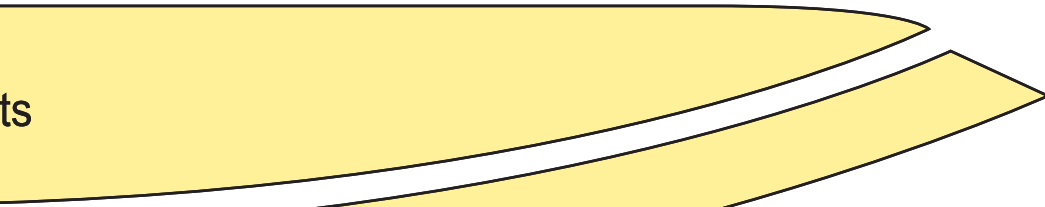

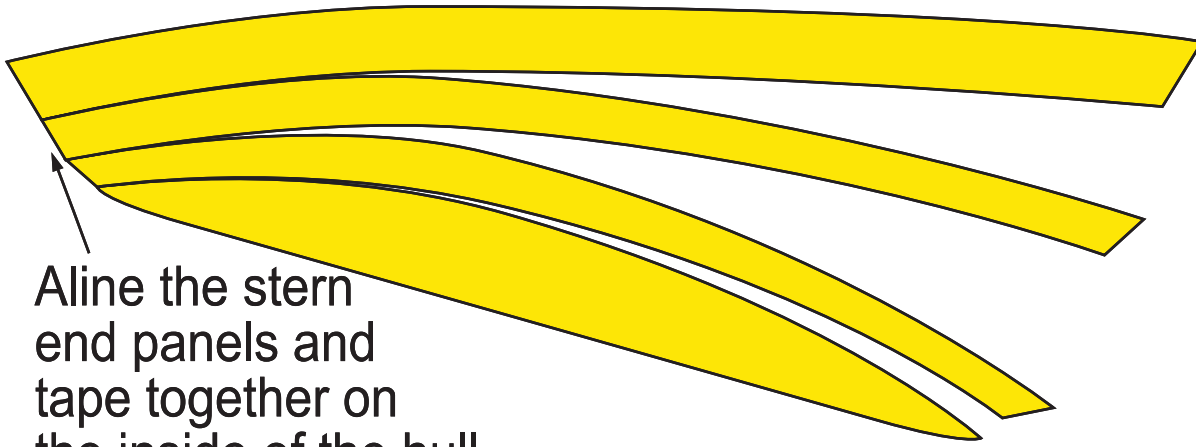


Align the stern end panels and tape together on the inside of the hull.

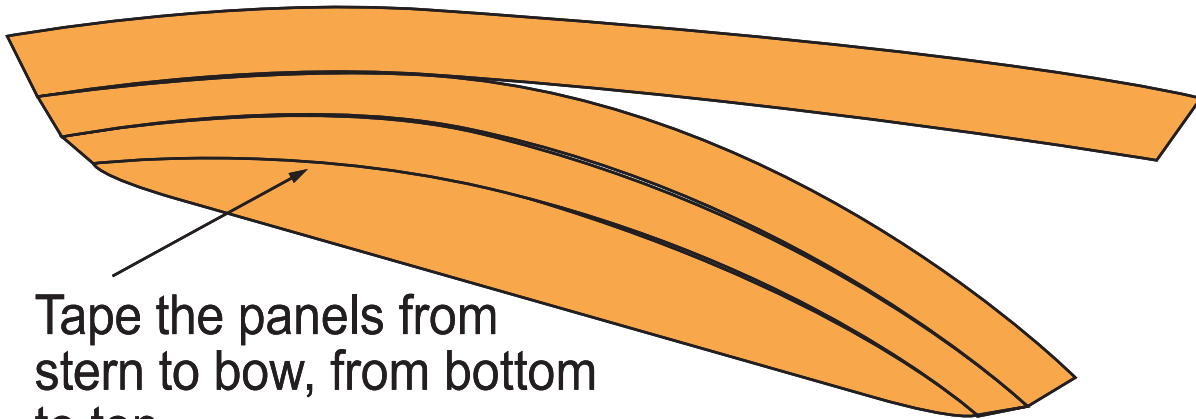


Tape the panels from stern to bow, from bottom to top.

All inside views this page.

Print PDF file
Paste to Cardboard
Cut out along lines
Tape back together
Join two halves
Tape ends at tops
Tape panel ends
Place and tape bulkheads

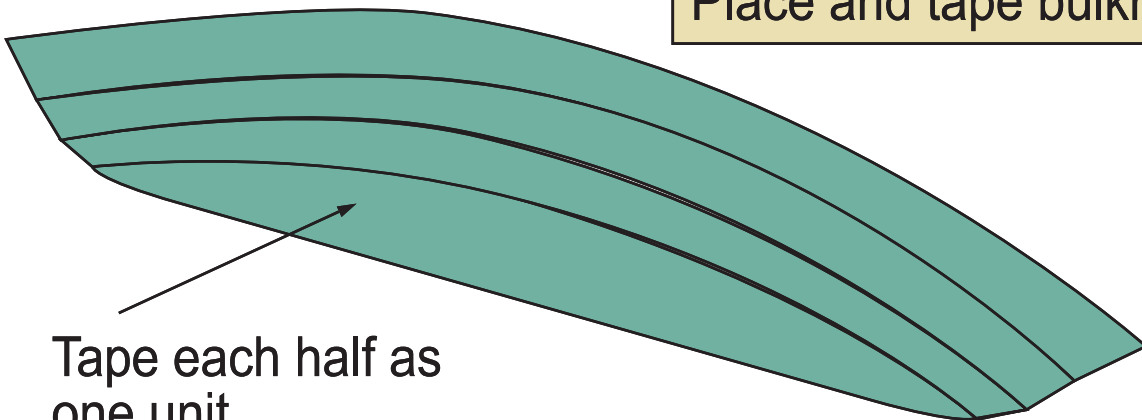


Tape each half as one unit.

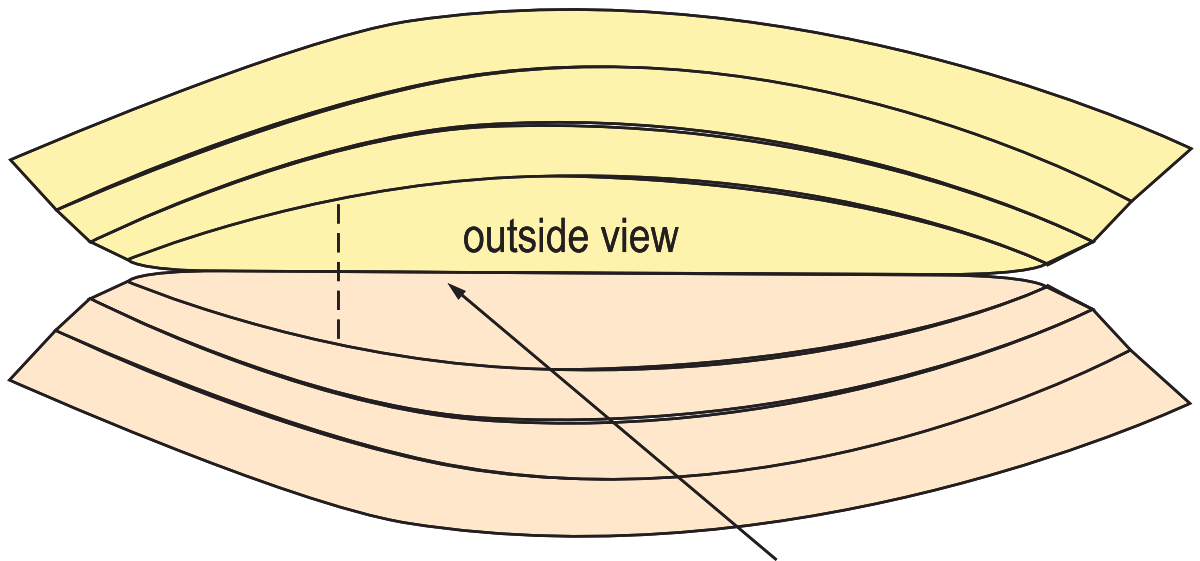

Align the two panel sets and tape along the keel seam on the inside.

Tape the ends from the outside, starting by matching the top panels and working each pair down to the keel.

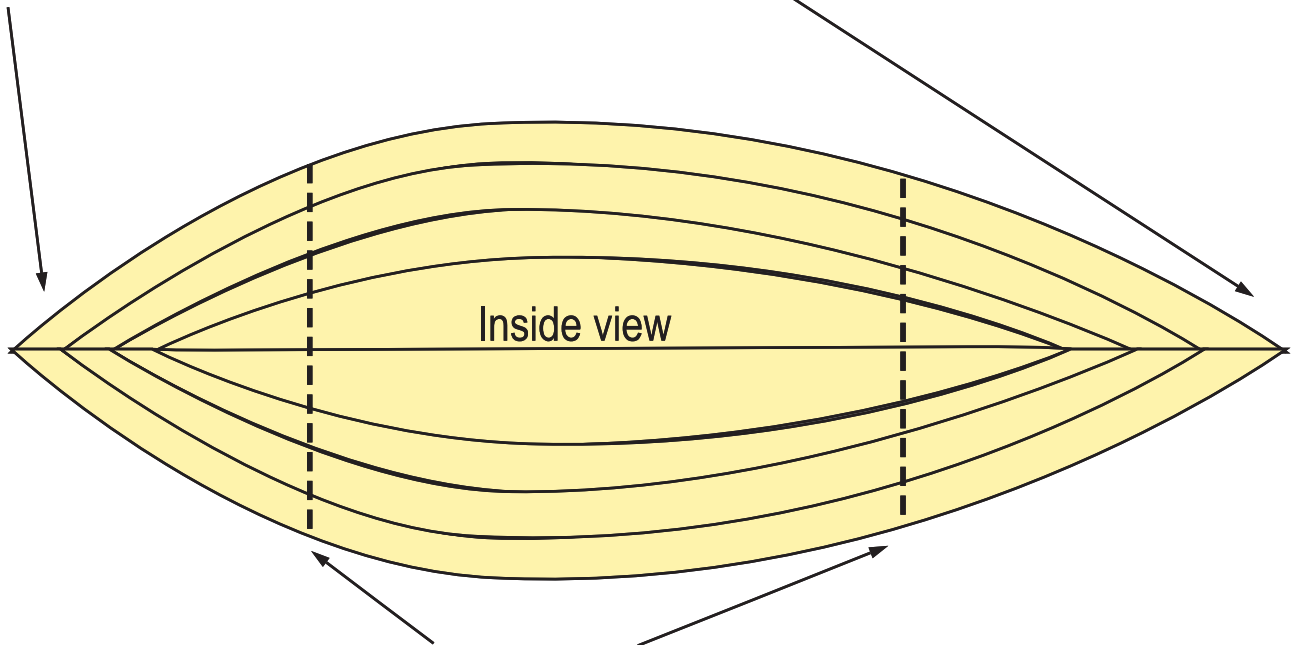

Place the bulkheads at the "Arrows" marked on the hull. The bulkheads are used to maintain hull shape to show the lines of the O&P Pod.